



**HMI HOYME** TIMER ADAPTORS  
GRASSLIN INTERVAL TIMER CENTER PIN SETTINGS  
(3-WAY MANUAL OVERRIDE)

In addition to the white pins on the periphery which may be pulled outwards for various timer settings, there is another pin (3-way manual override) located in the centre of the timer face as shown by the Red Arrow.

There are three positions for the 3-way manual override. The normal position is in the 'middle'. In this position the timer will operate as it should. Each white pin extended outwards on the periphery represents 15 minutes each of current control.

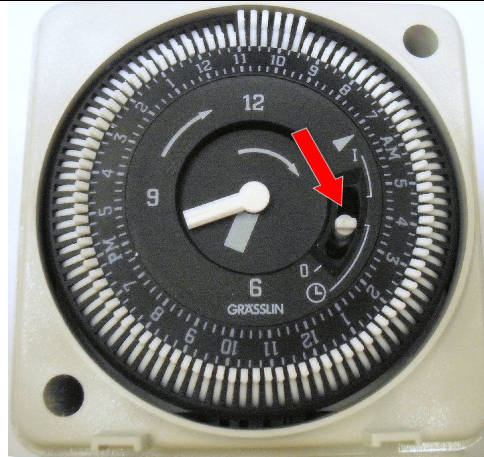

The centre pin placed in the up 'I' position will cause the timer to act as if all the white pins were extended.

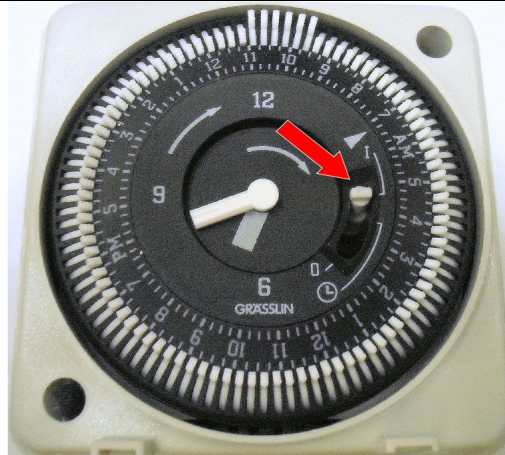

The centre pin in the down '0' position will cause the timer to act as if there were no pins extended.

