

## CHANGE Power Close (PC) Dampers to Power Open (PO) or vice versa.

**NOTE: Round Spring Plates (shown) and Adjustable Spring Plates are interchangeable. If Adjustment feature is required after Plate change, please phone the factory for details.**

DAMPER #1 is a Power Close Damper. Note position of the motor mounted as shown in Figure 1.

Figure 2 shows other side of the Damper with Spring Plate and Spring holding the damper Open.

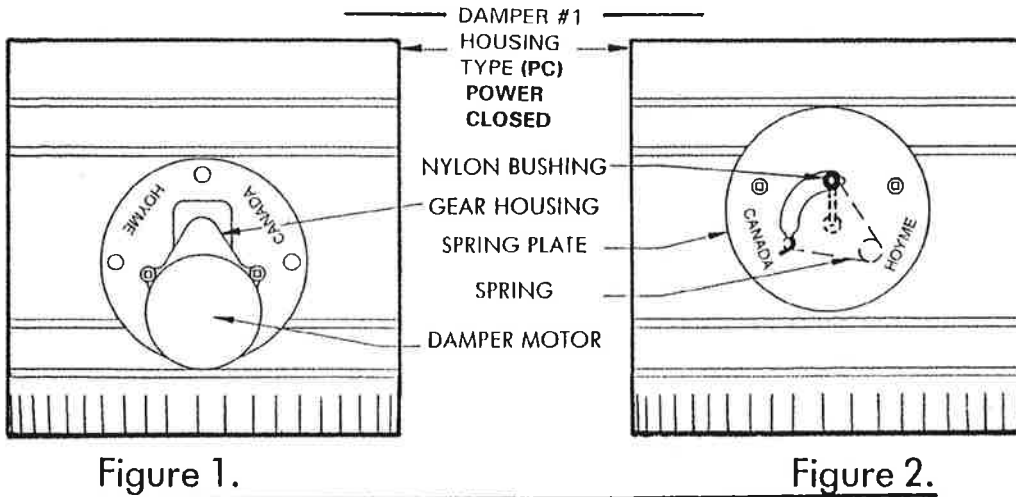


Figure 1.

Figure 2.

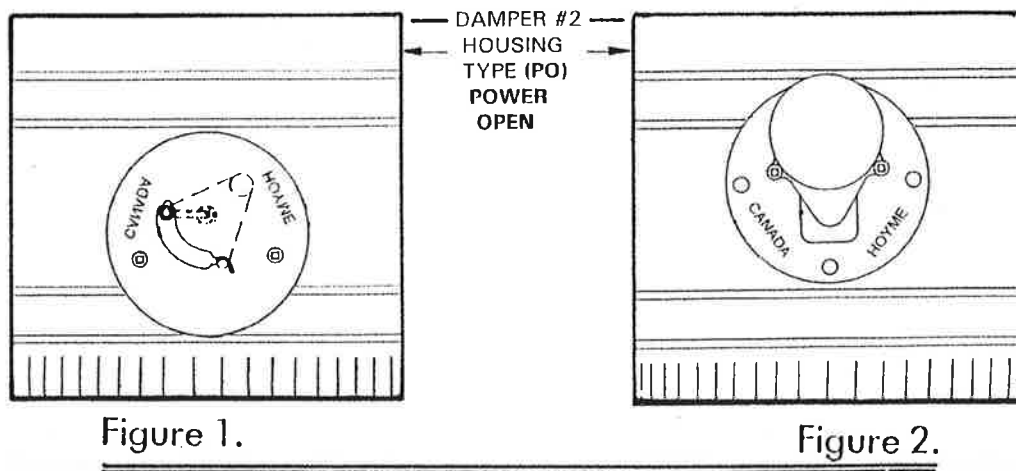


Figure 1.

Figure 2.

DAMPER #2, Figure 1, is a Power Open Damper with the Spring Plate and Spring holding the Damper Closed. Figure 2 shows the other side of the Damper and note the position of the Motor.

## HOW TO CHANGE THE PO DAMPER TO A PC DAMPER or vice versa.

1. Remove the Motor ready to be remounted to the other side of the Damper.
2. Remove the Spring Plate and by changing the direction of the screws in the spring plate, remount the spring plate inside out to the other side of the Damper. Note the proper position of the spring.
3. Before replacing the Motor, check for smooth Spring operation of the Damper.
4. Remount the Motor and check for smooth operation of the Motor and Damper.
5. Change the I.D. and Date of the Damper to reflect the operation, PO or PC.